

**Filo muro/** frameless, flush to the wall

SWING DOOR




# Types of Applications



## Finishes


- Primed / Laminated Import
- Laminated Suncrest / Matte Lacquer
- Wood veneer

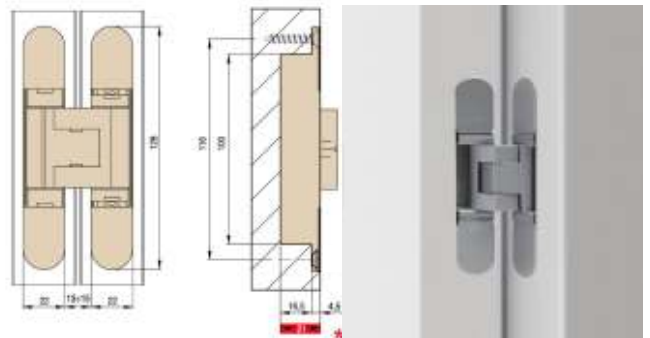

## What's included

- Technical Specifications:
- Solid Core Door Slab
- Finish – Designer's choice
- Hinges – CEAM Italia 3D adjustable
- Frame – Concealed aluminum
- Handset – DAYORIS Italia
- Mortise – Bonaiti Magnetic
- Design – Designers Choice

## Frame Profile Finishes

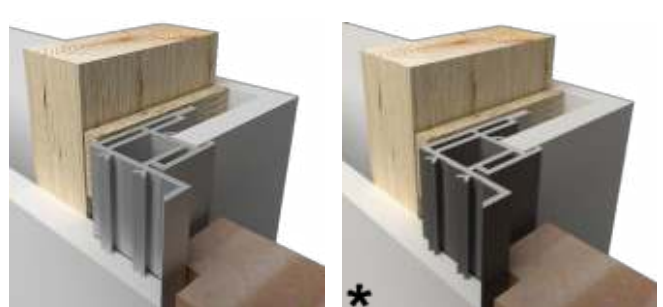


Clear Aluminum Frame


\* Black Aluminum Frame

\* Optional Upgrades


# Benefits of Filo muro/ frameless, flush to the wall

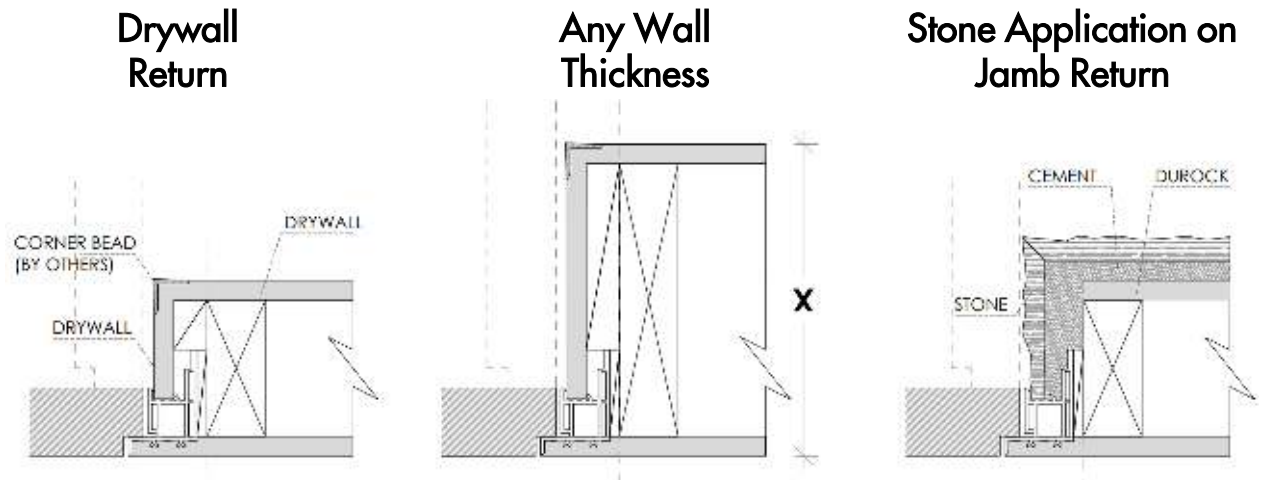

Always flush on the outside of the wall regardless of the door swing.

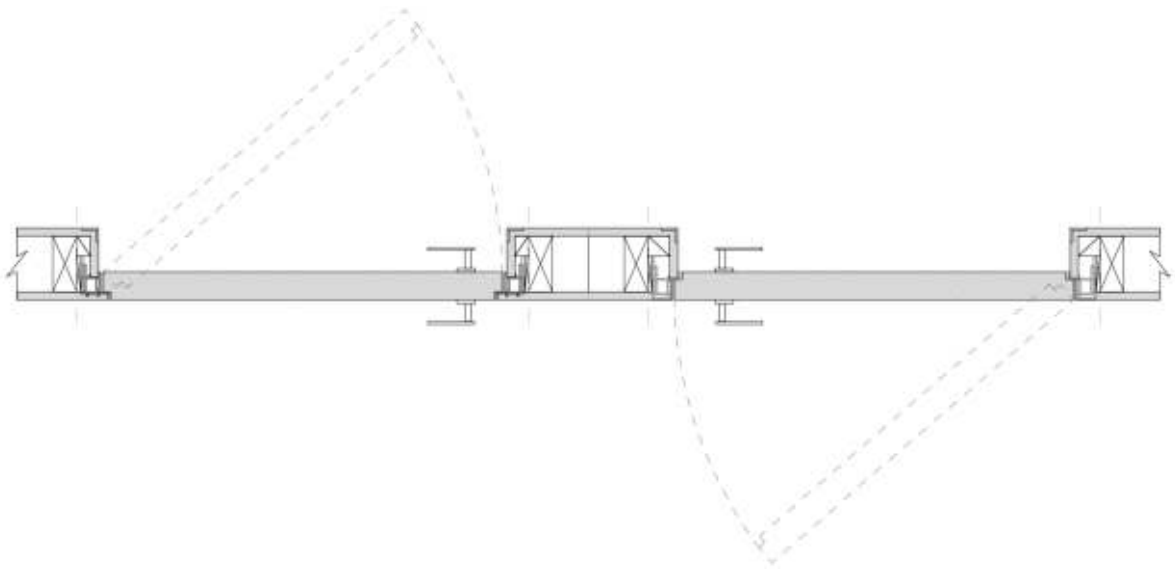


Works with 1/2" depth reglet (any height). Can be used with 5/8" drywall.

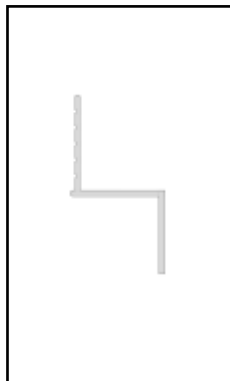


DEPTH	WIDTH	NON-VENTED
1/2"	1/8"	DRMZ-25-125
1/2"	1/4"	DRMZ-50-25
1/2"	3/8"	DRMZ-50-375
1/2"	1/2"	DRMZ-50-50
1/2"	5/8"	DRMZ-50-625
1/2"	3/4"	DRMZ-50-75
1/2"	1"	DRMZ-50-100
1/2"	1 1/2"	DRMZ-50-150
1/2"	2"	DRMZ-50-200

\* Fry reglet for reference purposes only, not provided by Dayoris.

# Framing Instructions Filo muro/ frameless, flush to the wall

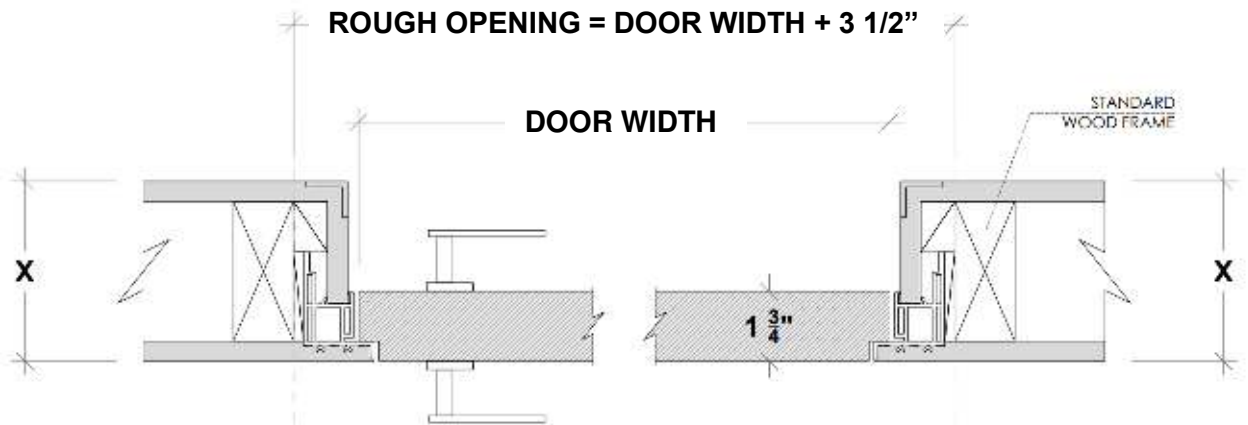


$X$  = THE WALL CAN BE ANY THICKNESS  
 ALL OPENINGS MUST HAVE WOOD SUPPORT (  $2'' \times 4''$ ,  $2'' \times 6''$ ,  $2'' \times 8''$ , ... )

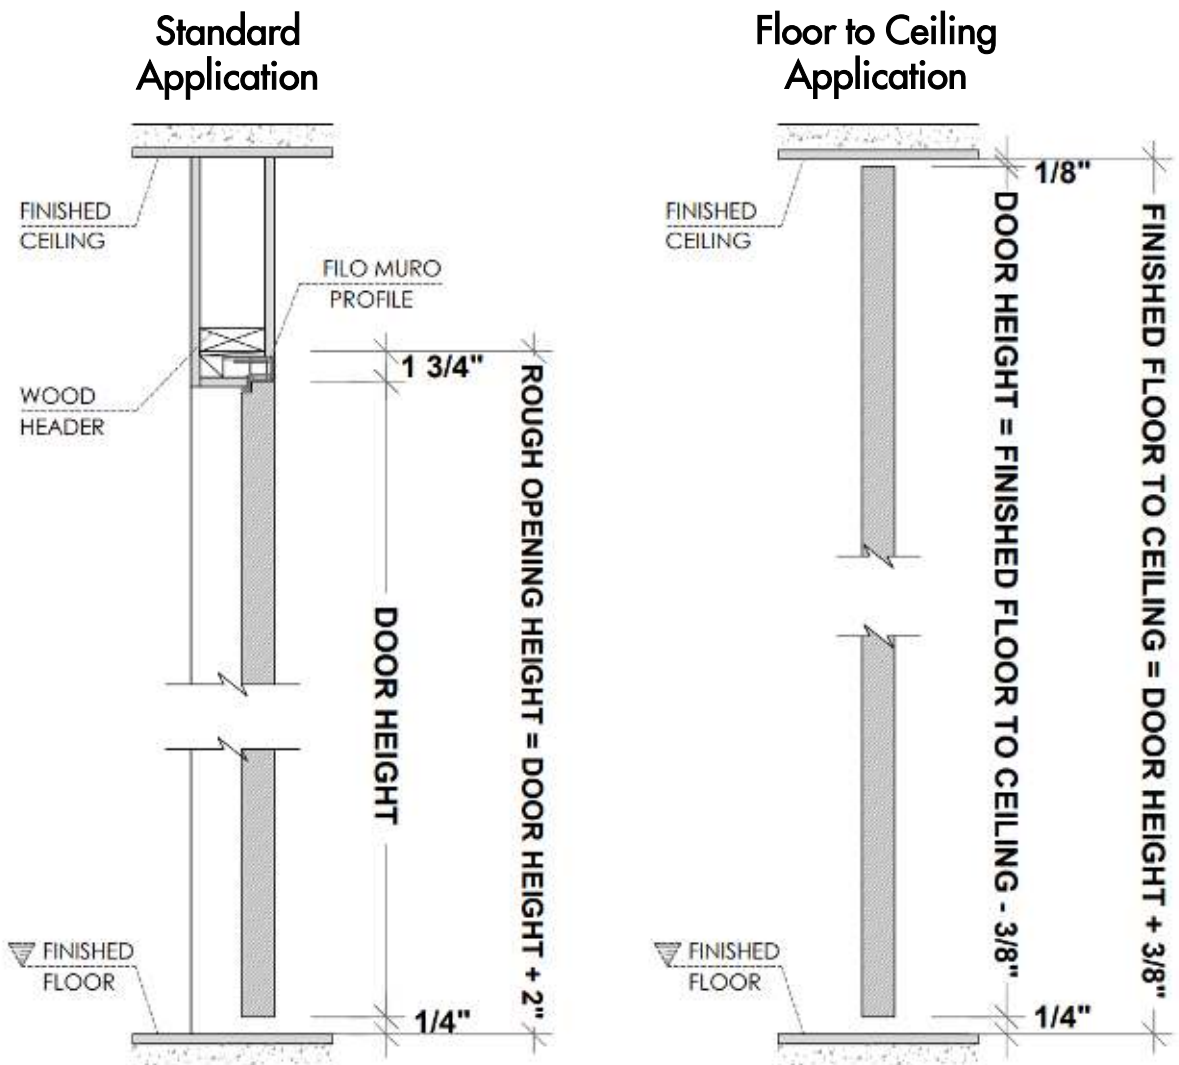


PLEASE ACCOUNT FOR FINISHED FLOOR FOR ALL MEASUREMENTS GIVEN TO DAYORIS.

# Inswing Application

Left Hand Inswing

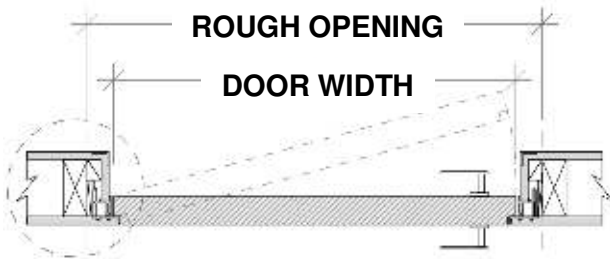

Right Hand Inswing

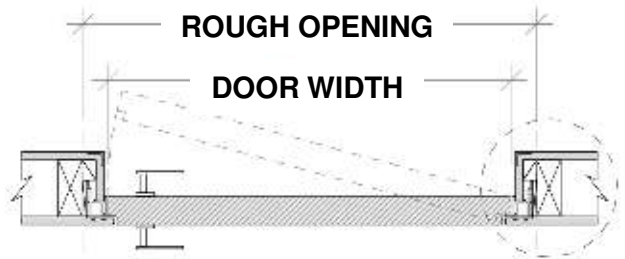

CORNER BEAD  
(BY OTHERS)

SHIM SPACE

DRYWALL AND PLASTER  
(BY OTHERS)

DAYORIS  
DOOR SLAB

DAYORIS  
FILO MURO  
PROFILE

$\frac{7''}{8}$

MESH TAPE  
MUD/PLASTER  
(BY OTHERS)



FLOOR TRANSITION  
 $\frac{7}{8}$ " FROM DRYWALL

45° BEVEL FOR  
PLASTER FINISH

# Outswing Application


Right Hand Outswing

Left Hand Outswing

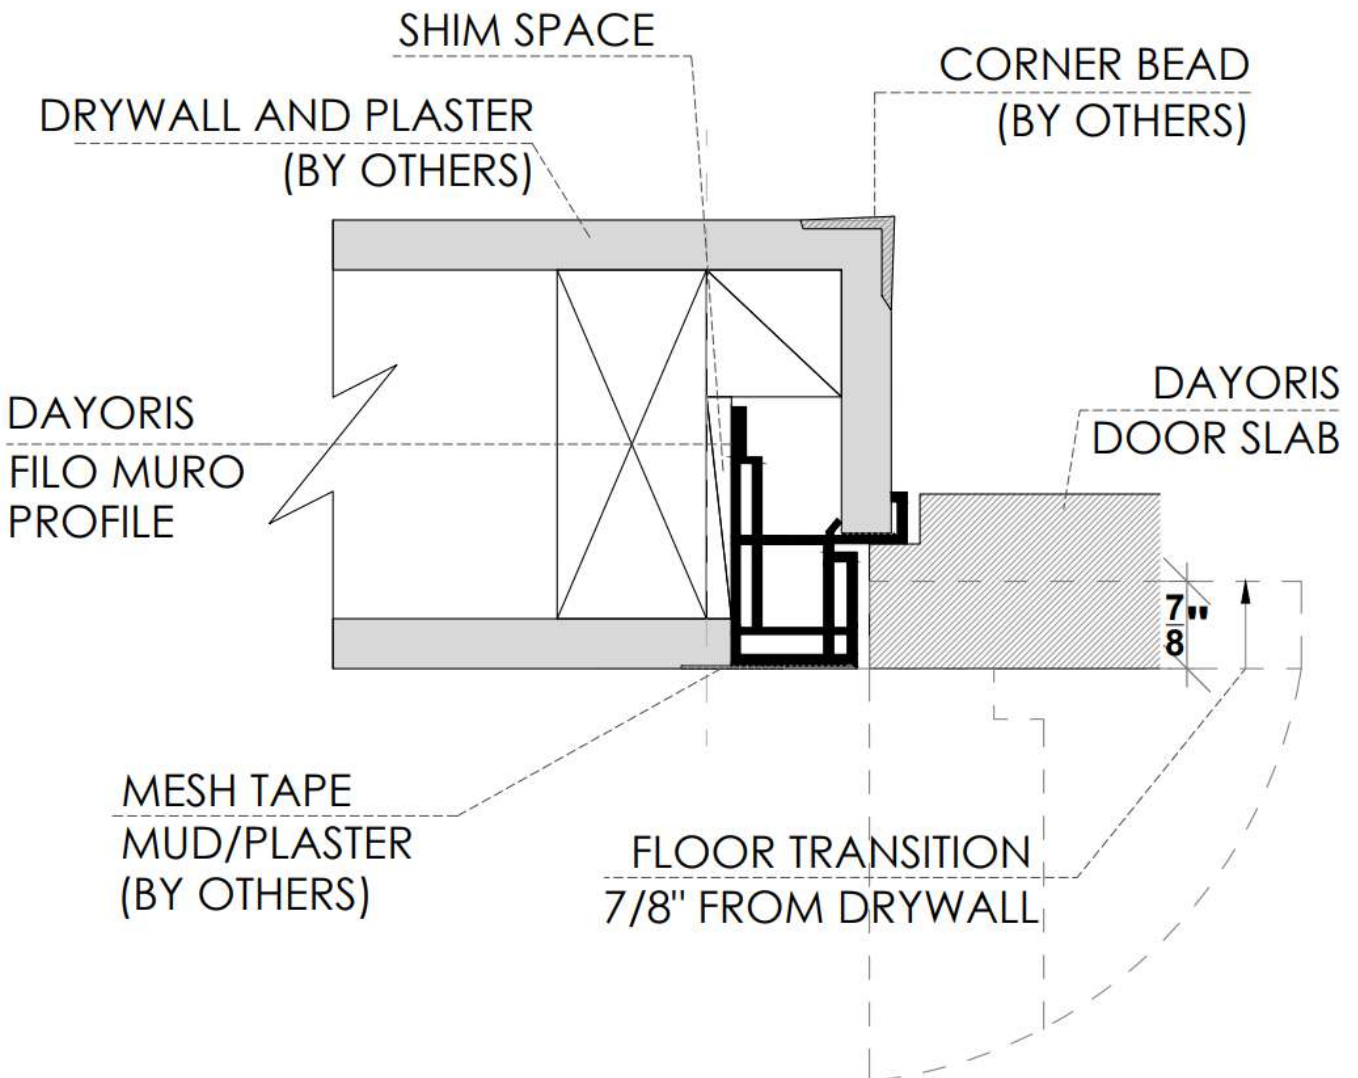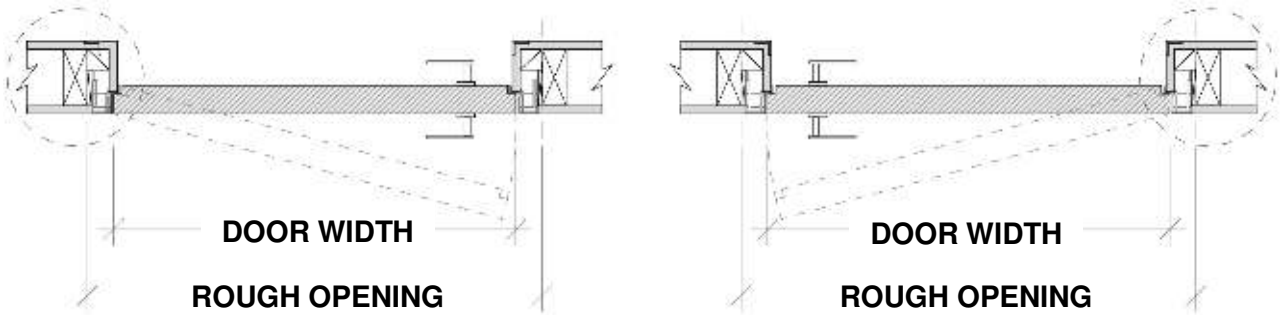


# Double Door Applications

## Double Dummy Application with top magnetic catch ( both active)

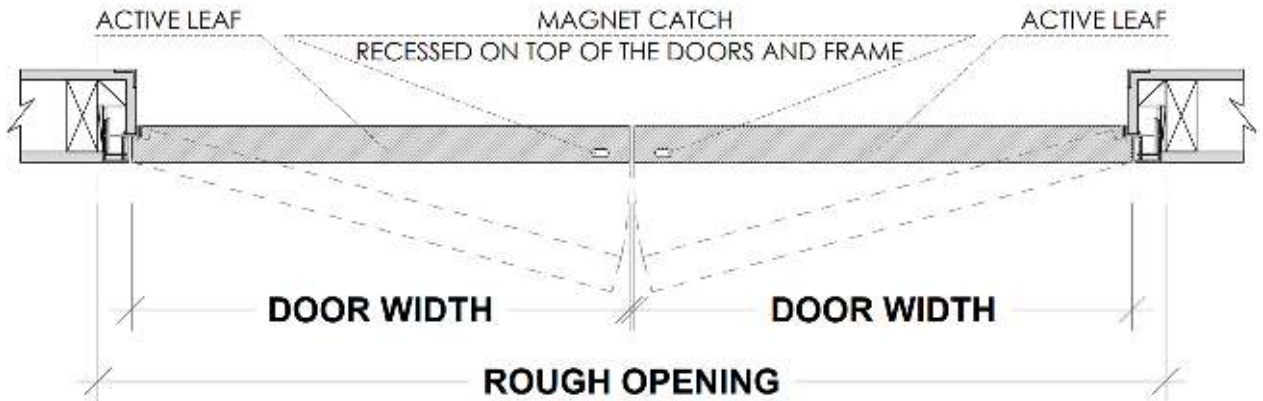

$$\text{ROUGH OPENING} = (\text{DOOR WIDTH} \times 2) + 3 \frac{1}{2}"$$


## Active / Inactive Door with flush bolts

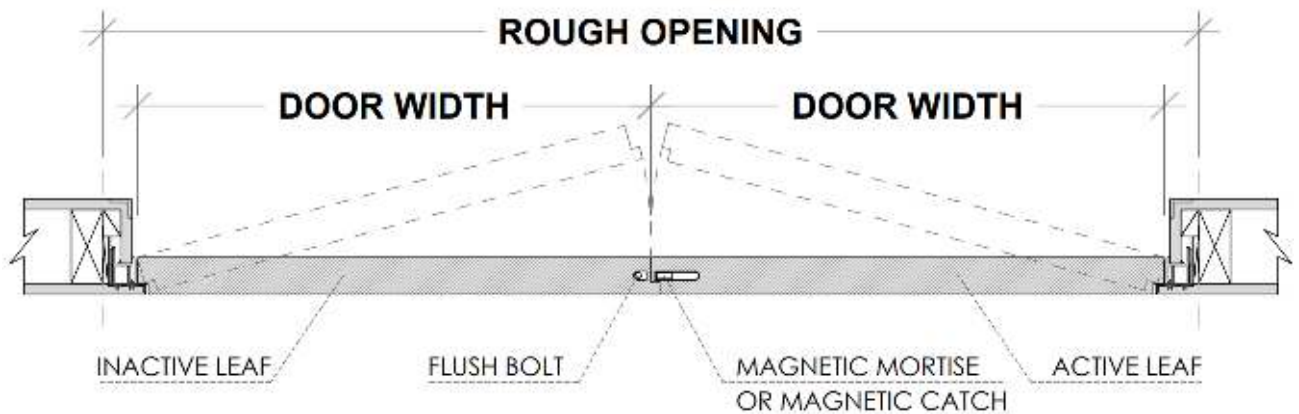

RHA (RIGHT HAND ACTIVE) SHOWN

$$\text{ROUGH OPENING} = (\text{DOOR WIDTH} \times 2) + 3 \frac{1}{2}"$$

# Filo muro with Transom Application

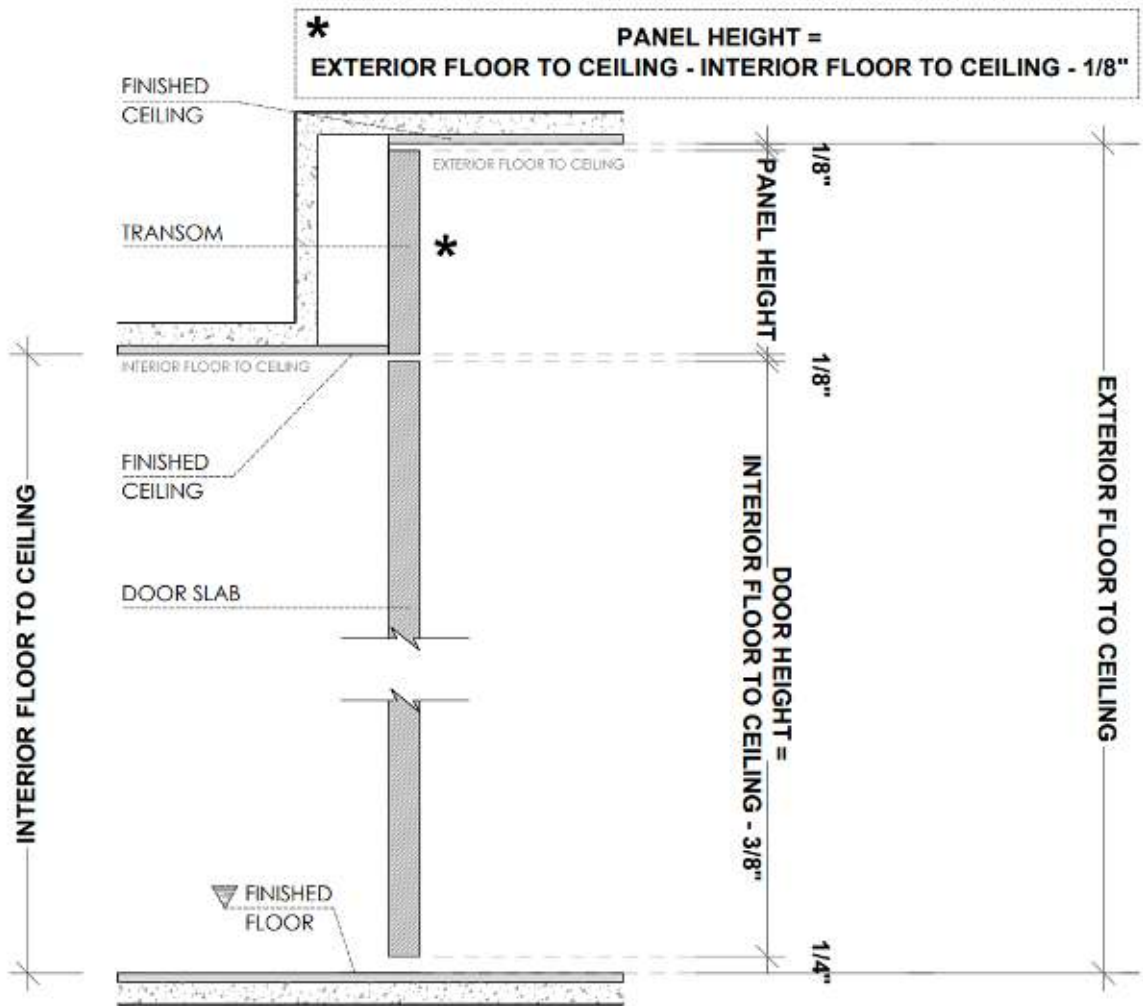




# Hardware



# Lock Types for Swing Doors

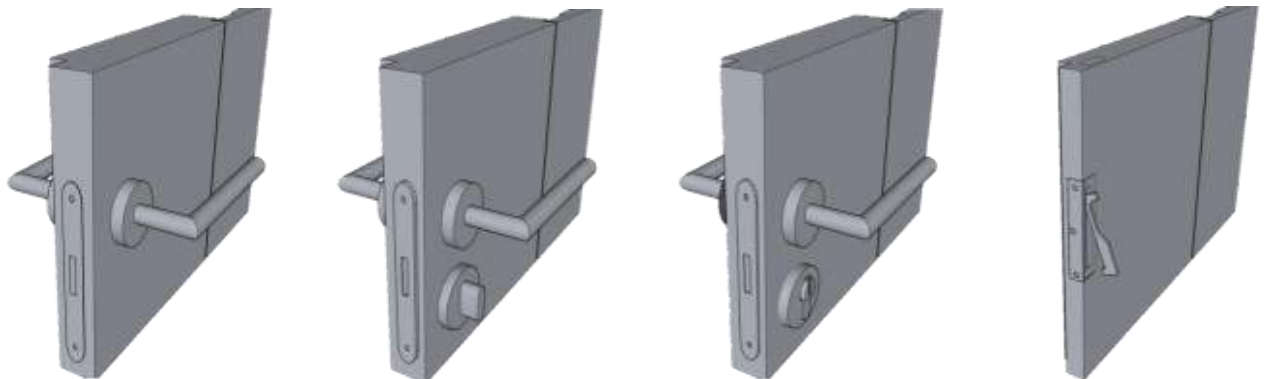


Passage (PA)

Privacy (PV)

Privacy Keyed \*

Knife pull + Magnet catch

# Bonaiti Magnetic Lock

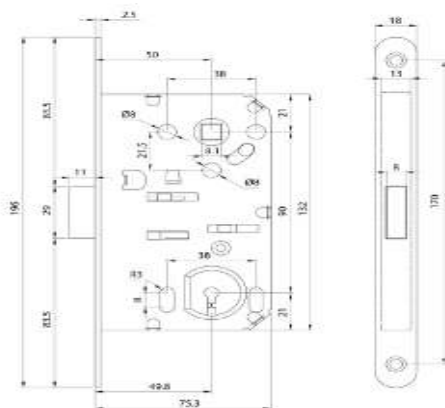

\* Optional Upgrades

# Filo muro/ frameless, flush to the wall

## Installation Instructions

Doors and frames arrive mortised and cut to size.




### Verify the level of the wall and rough openings

Identify the furthest point out of level of the wall. (This is where the door is installed).



### Installing the aluminum frame


Place and screw wood shims leveling the aluminum frame inside 2'x4' rough, then remove frame stabilizers.

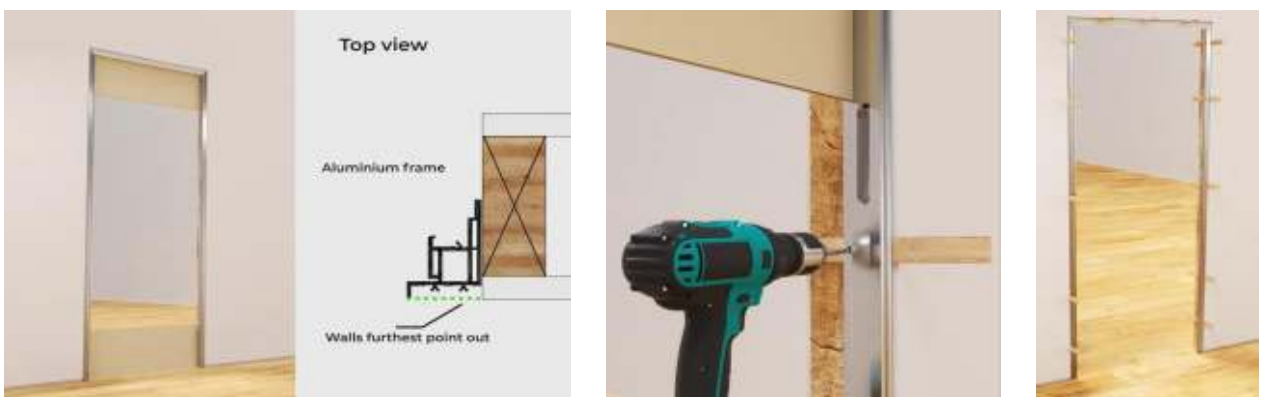

# Filo muro/ frameless, flush to the wall


## Hinge installation

Fit and screw hinges into the frame and door, then connect and screw hinges together while hanging door inside the aluminum frame. Use hinge adjustment screws to center door inside of the aluminum frame.

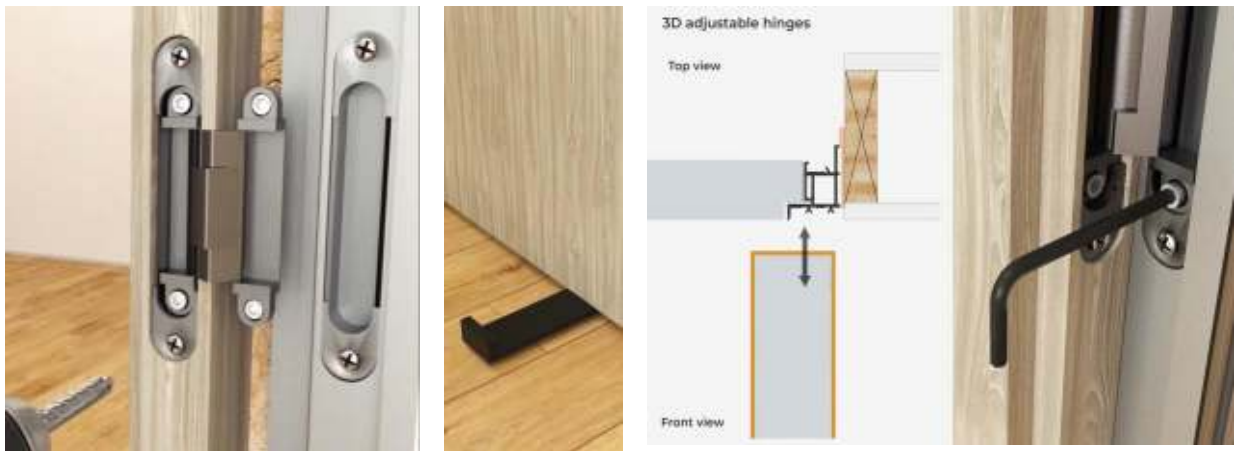

## Handle installation

Screw handles into the mortised holes of the door and install rosettes. Proceed to cut the wood shims around the frame.

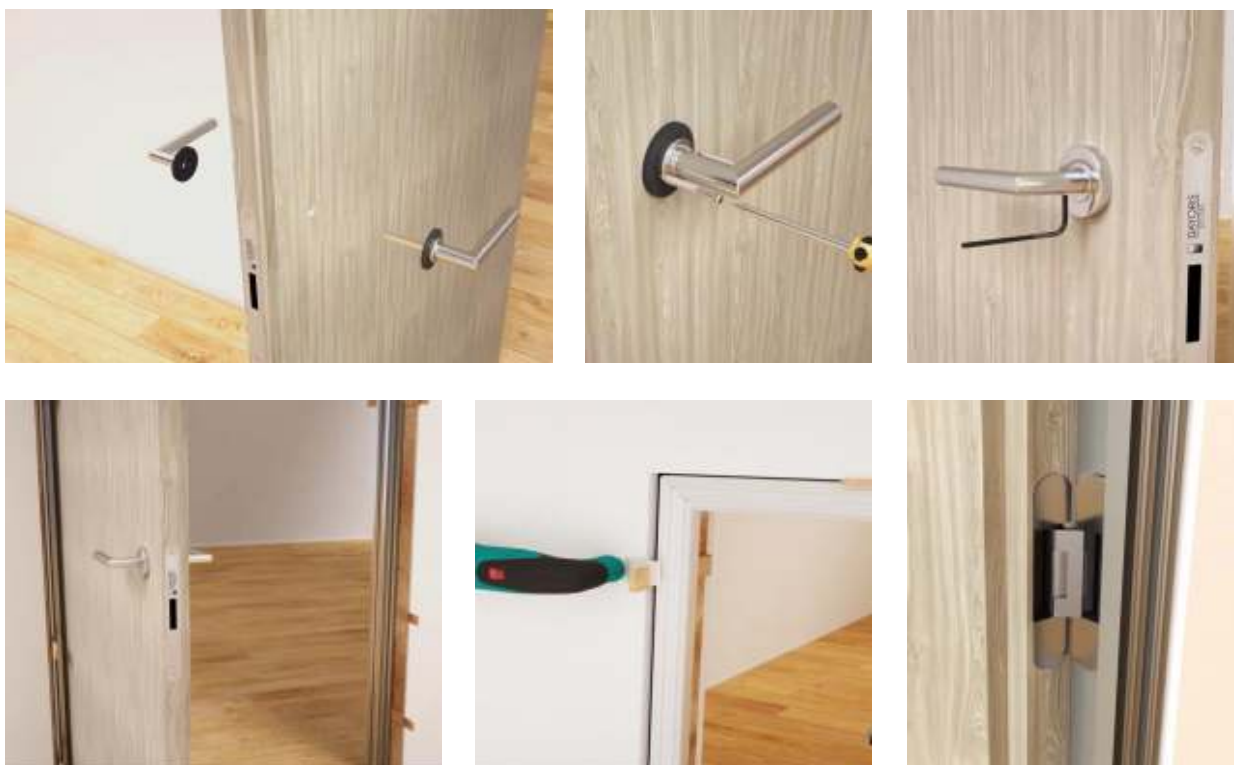

# Filo muro/ frameless, flush to the wall

## Finishing Technique

### Flush to the wall

Front side: Use mesh tape to cover transition between 2'x4' and aluminum frame. Then apply plaster over mesh tape up to the 45° bevel in aluminum frame.



Rear side: Plaster application fits any wall thickness. Insert corner bead at transition point for a proper finish.



Tile or stone application: Plaster flush side as described above. Apply stone on jamb insert joining adjacent wall.

