


Filo muro/ frameless, flush to the wall

SWING DOOR



DAYORIS
DOORS

Types of Applications

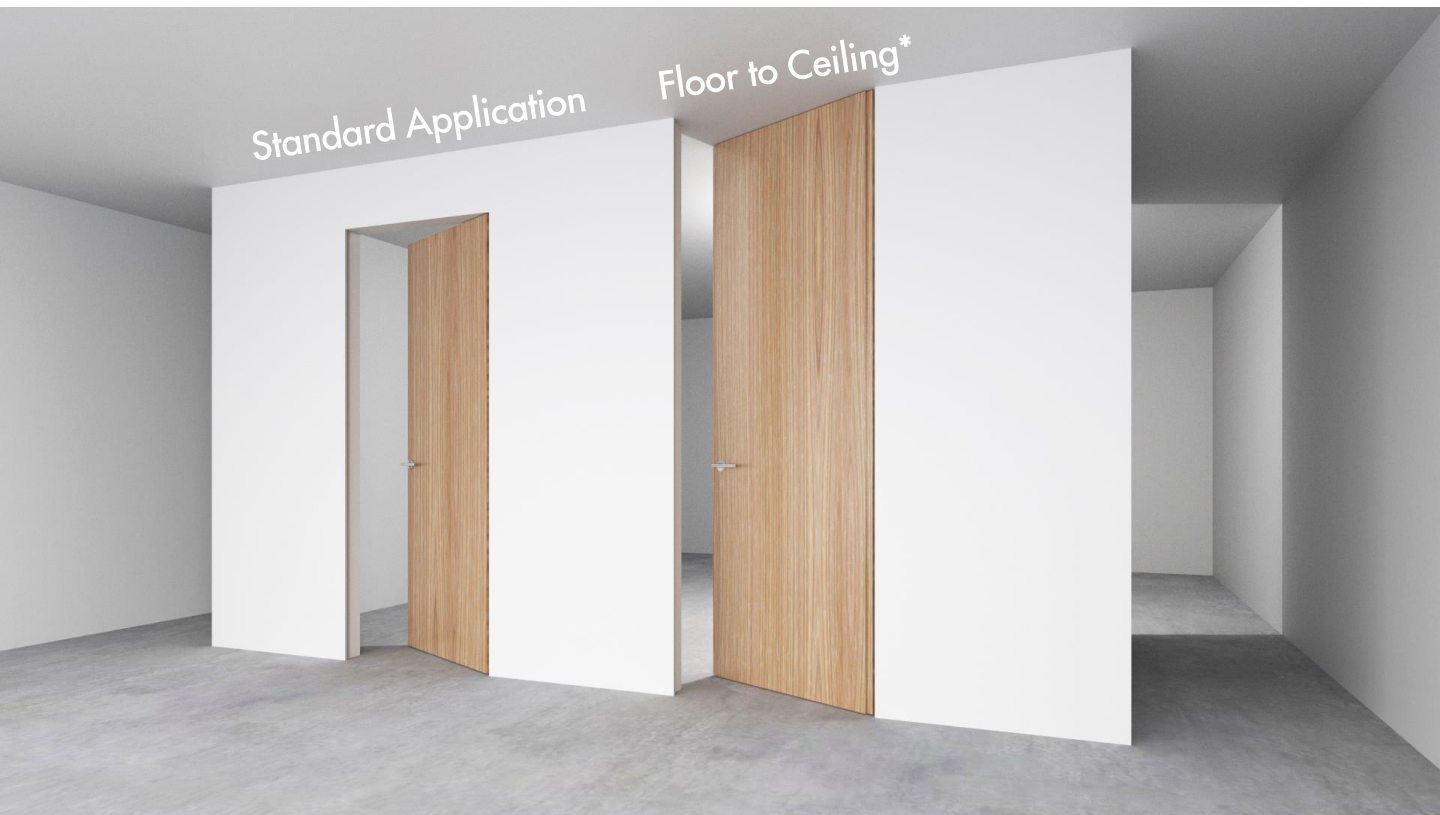


Finishes

Primed / Laminated Import

Laminated Suncrest / Matte Lacquer


Wood veneer

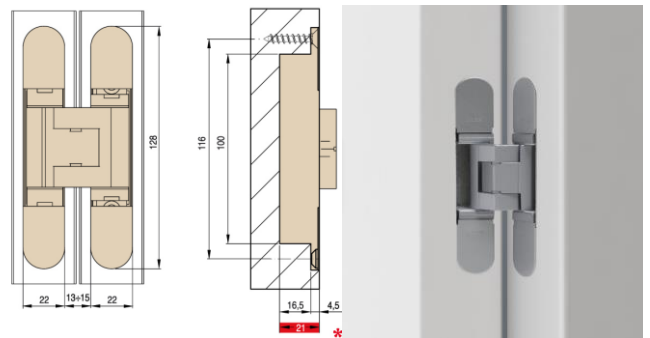


What's included

Technical Specifications:
 Solid Core Door Slab
 Finish – Designer's choice
 Hinges – CEAM Italia 3D adjustable
 Frame – Concealed aluminum
 Handset – DAYORIS Italia
 Mortise – Bonaiti Magnetic
 Design – Designers Choice

Frame Profile Finishes

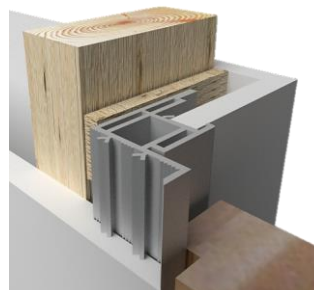


Clear Aluminum Frame

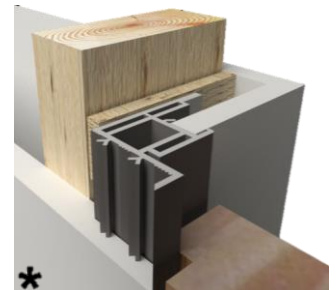


* Black Aluminum Frame

* Optional Upgrades


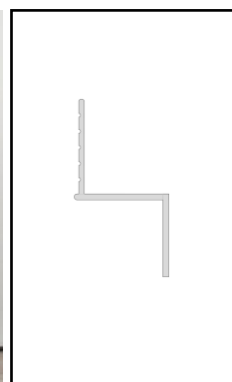
Benefits of Filo muro/ frameless, flush to the wall

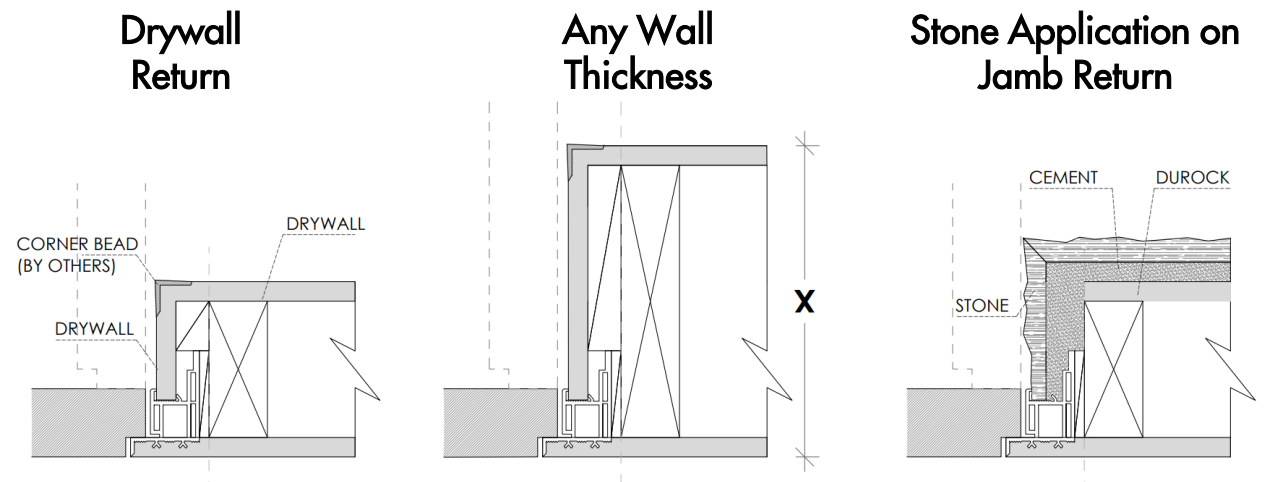

Always flush on the outside of the wall regardless of the door swing.

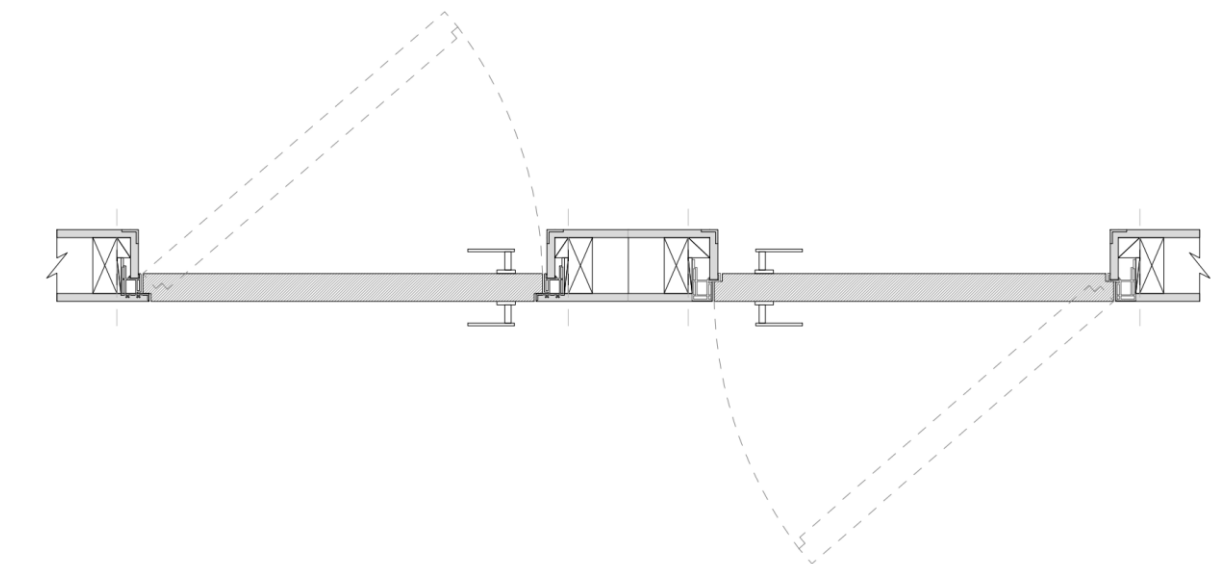


Works with 1/2" depth reglet (any height). Can be used with 5/8" drywall.



		DEPTH	WIDTH	NON-VENTED
		1/2"	1/8"	DRMZ-25-125
		1/2"	1/4"	DRMZ-50-25
		1/2"	3/8"	DRMZ-50-375
		1/2"	1/2"	DRMZ-50-50
		1/2"	5/8"	DRMZ-50-625
		1/2"	3/4"	DRMZ-50-75
		1/2"	1"	DRMZ-50-100
		1/2"	1 1/2"	DRMZ-50-150
		1/2"	2"	DRMZ-50-200

* Fry reglet for reference purposes only, not provided by Dayoris.

Framing Instructions Filo muro/ frameless, flush to the wall

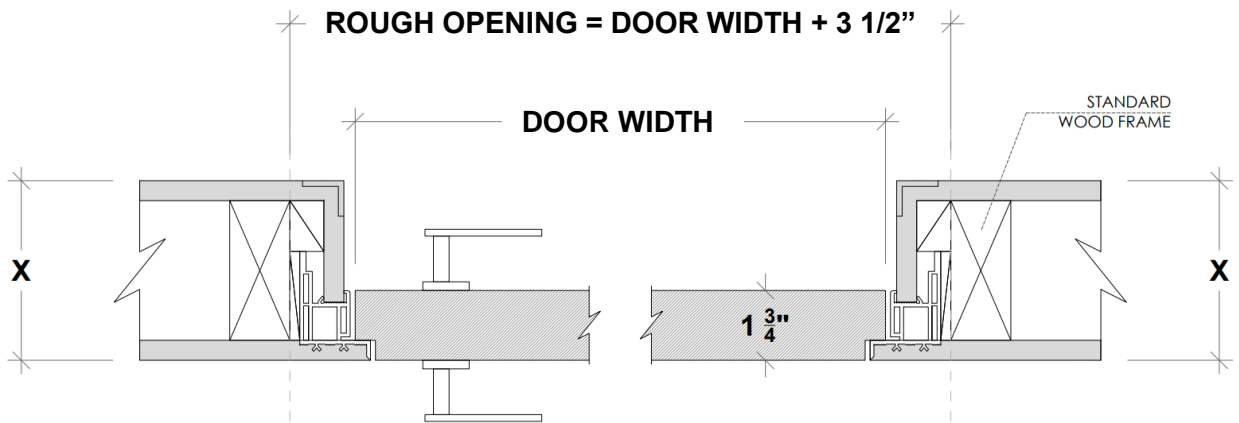


X = THE WALL CAN BE ANY THICKNESS
ALL OPENINGS MUST HAVE WOOD SUPPORT (2" x 4", 2" x 6", 2" x 8", ...)

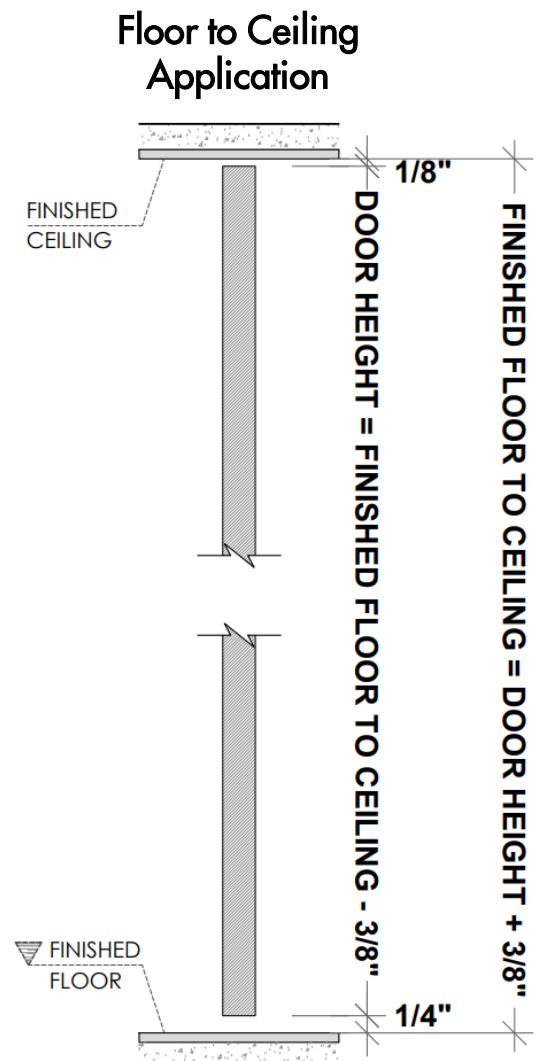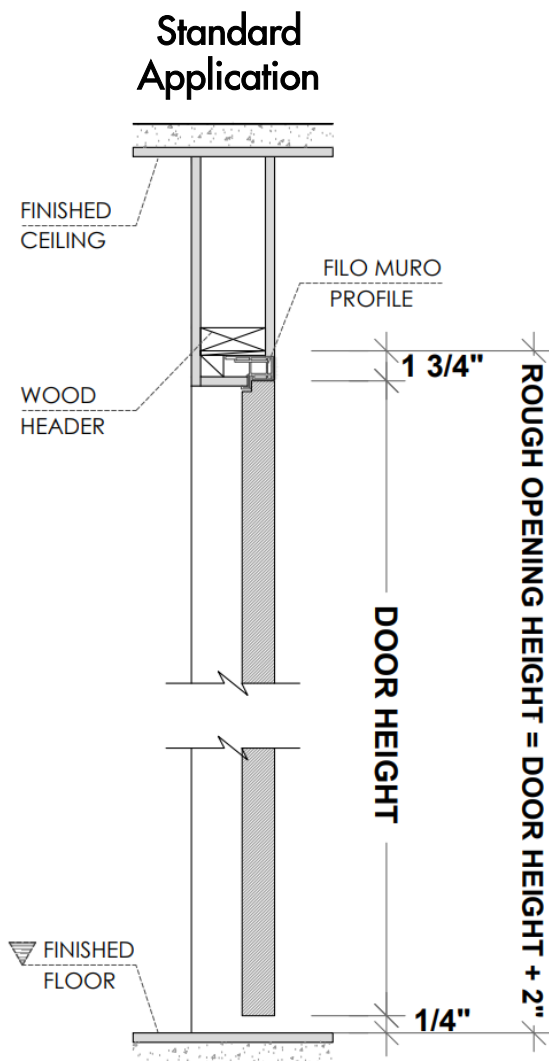


PLEASE ACCOUNT FOR FINISHED FLOOR FOR ALL MEASUREMENTS GIVEN TO DAYORIS.

Inswing Application

Left Hand Inswing

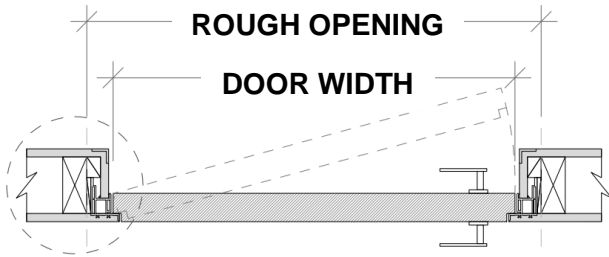

Right Hand Inswing

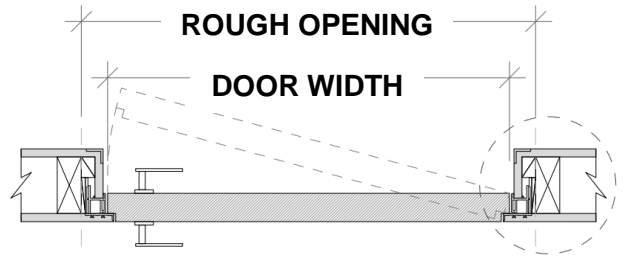

CORNER BEAD
(BY OTHERS)

SHIM SPACE

DRYWALL AND PLASTER
(BY OTHERS)

DAYORIS
DOOR SLAB


DAYORIS
FILO MURO
PROFILE

7"
8

MESH TAPE
MUD/PLASTER
(BY OTHERS)


FLOOR TRANSITION
7/8" FROM DRYWALL

45° BEVEL FOR
PLASTER FINISH

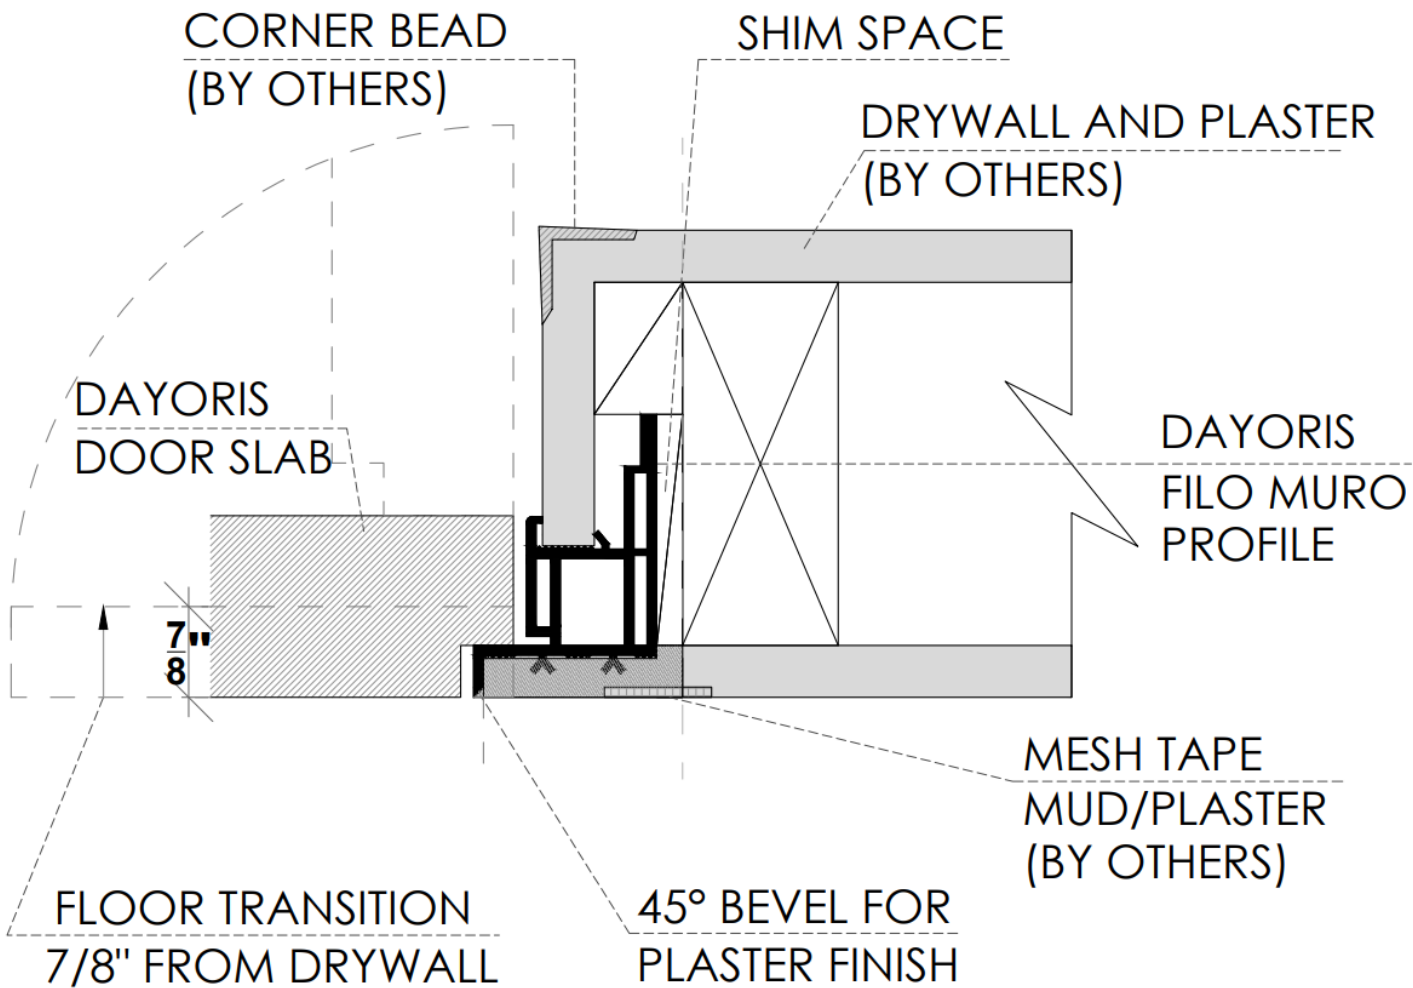


Floor Transition Detail

Filo muro/ inswing floor transition 7/8" from drywall


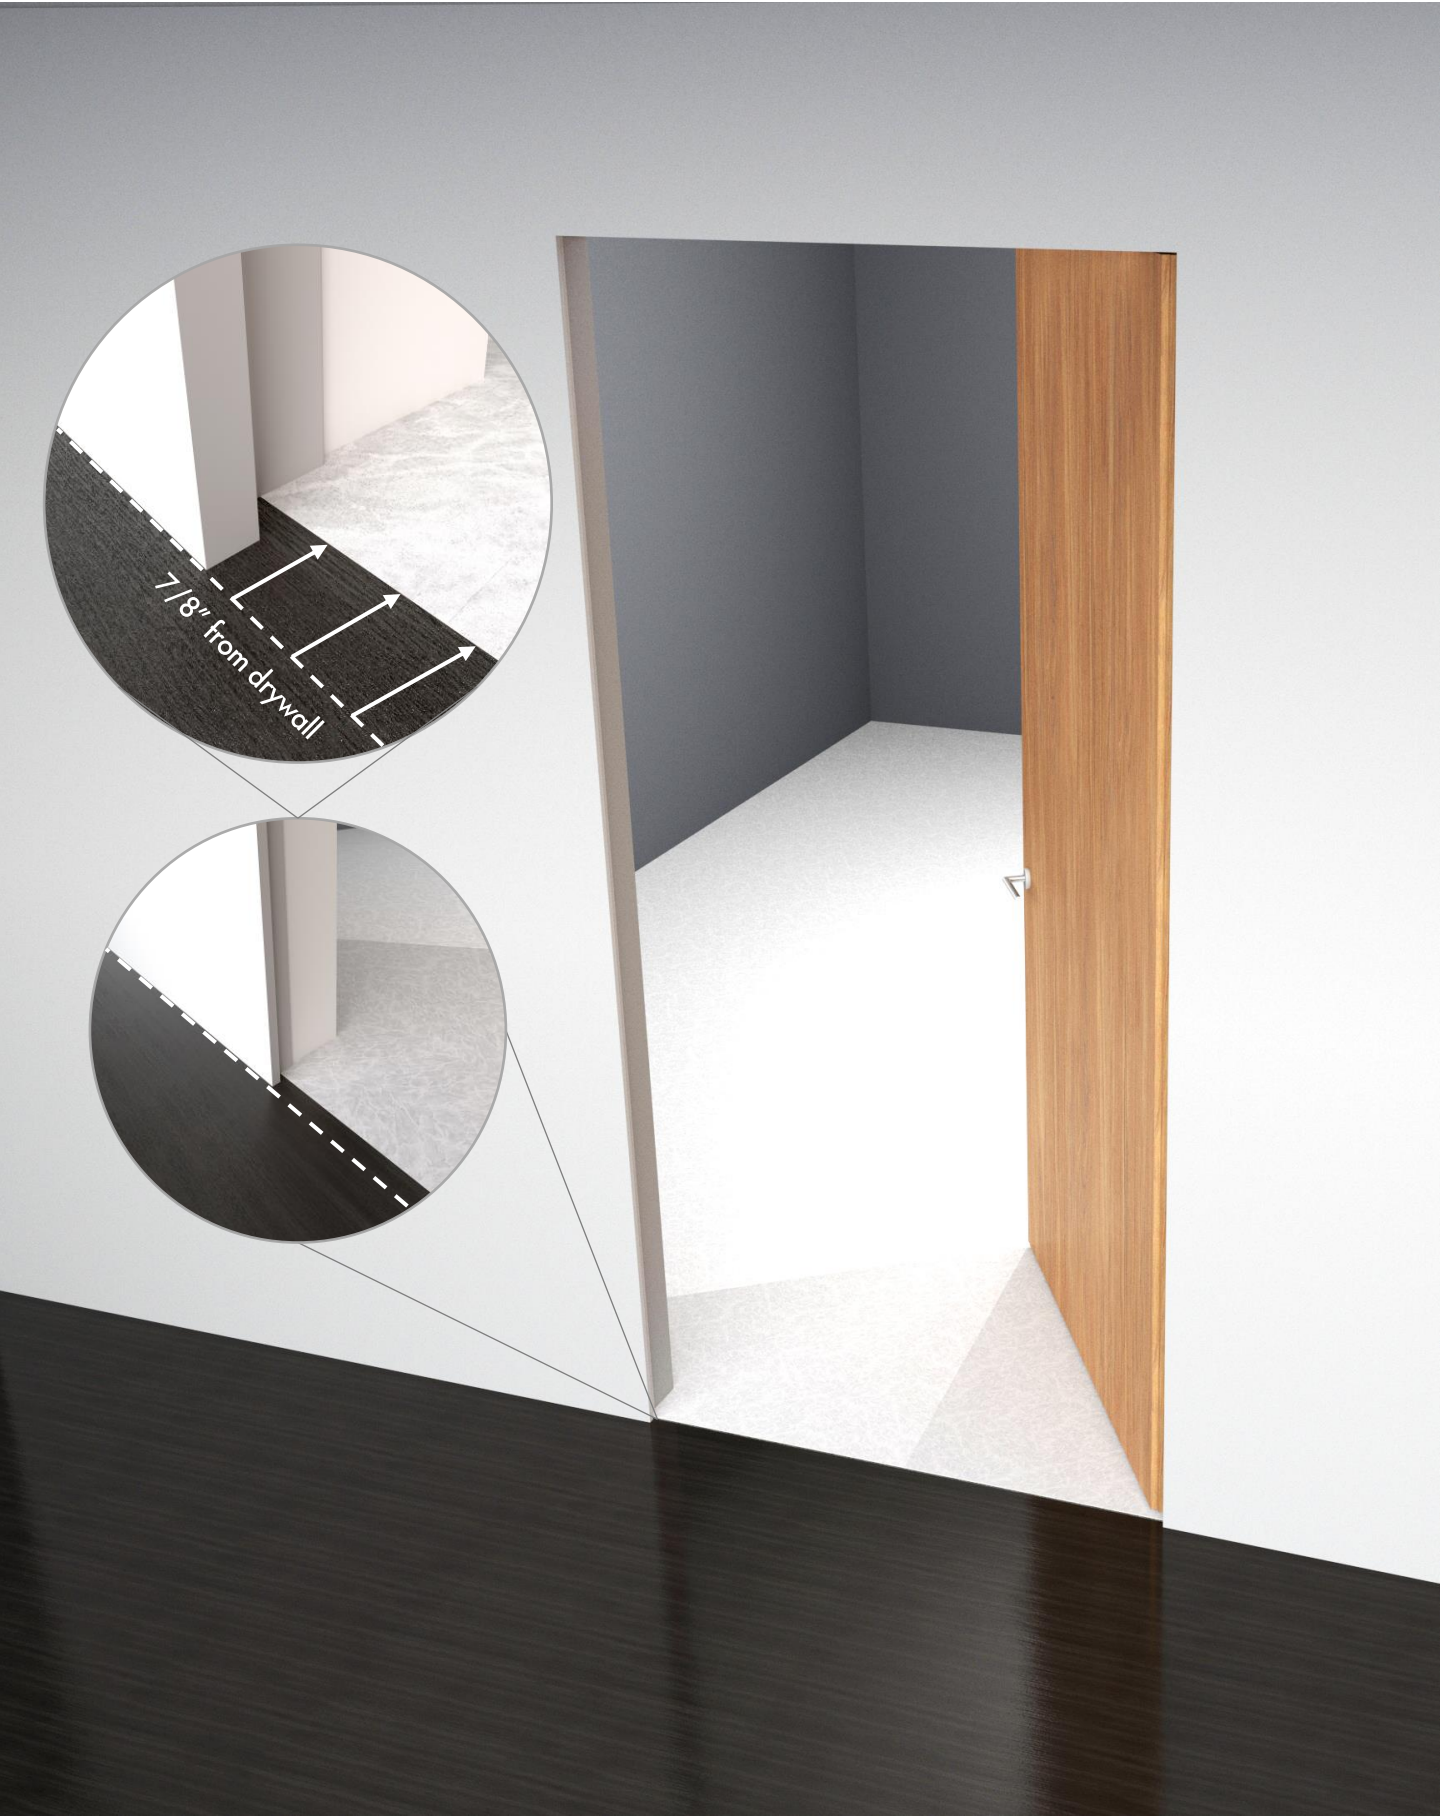


Outswing Application

Right Hand Outswing


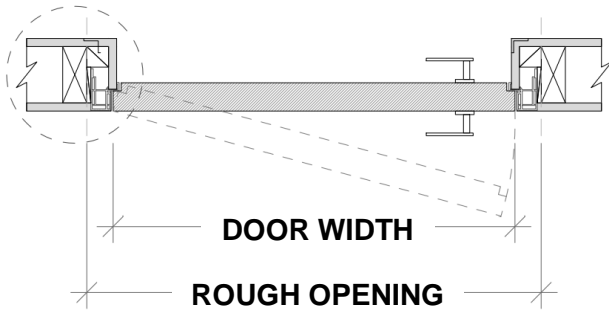


Left Hand Outswing

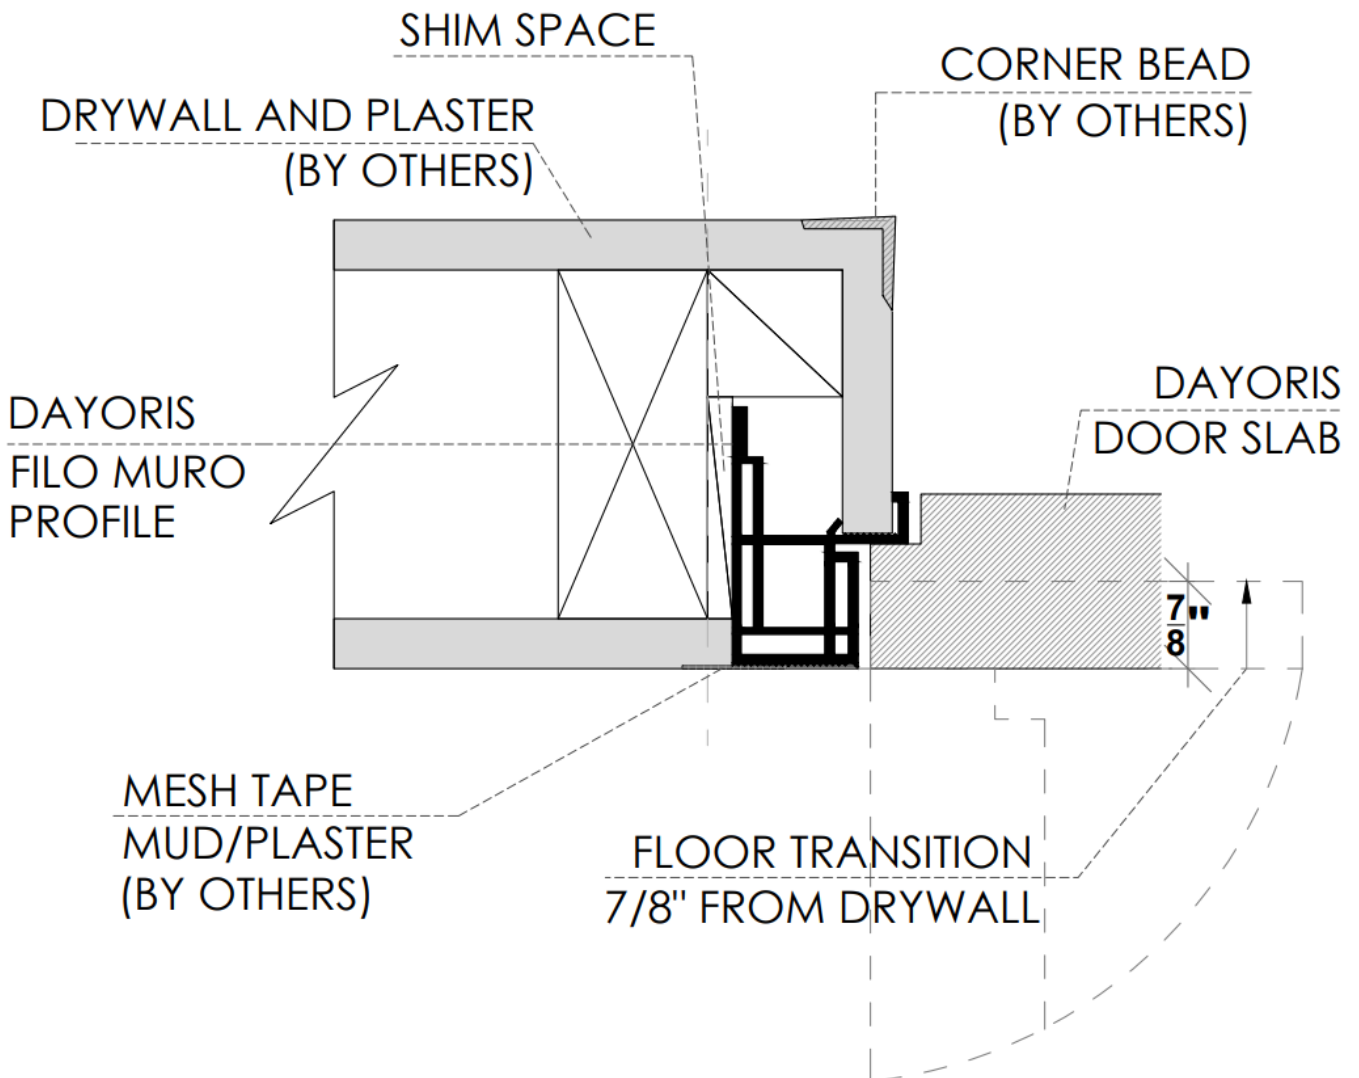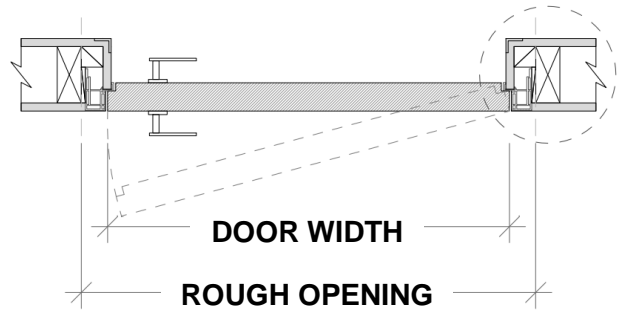


Floor Transition Detail

Filo muro/ outswing floor transition $7/8"$ from drywall

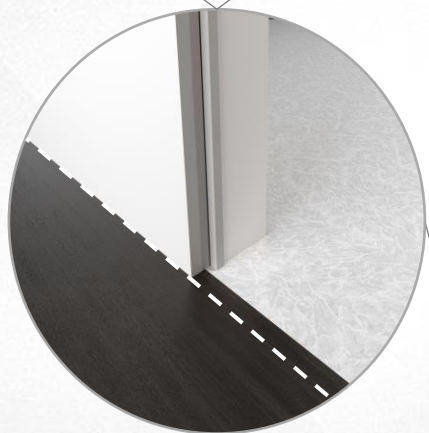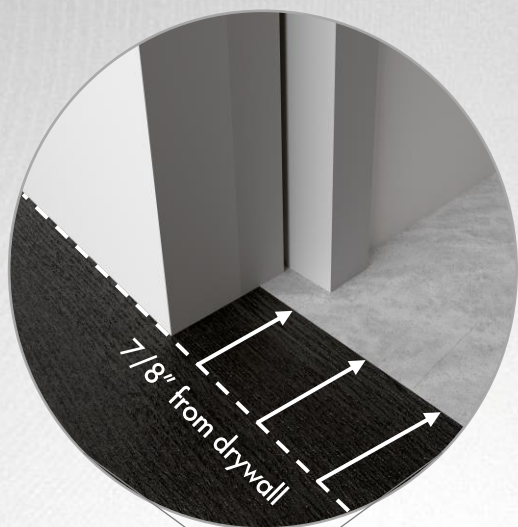


Double Door Applications

Double Dummy Application with top magnetic catch (both active)

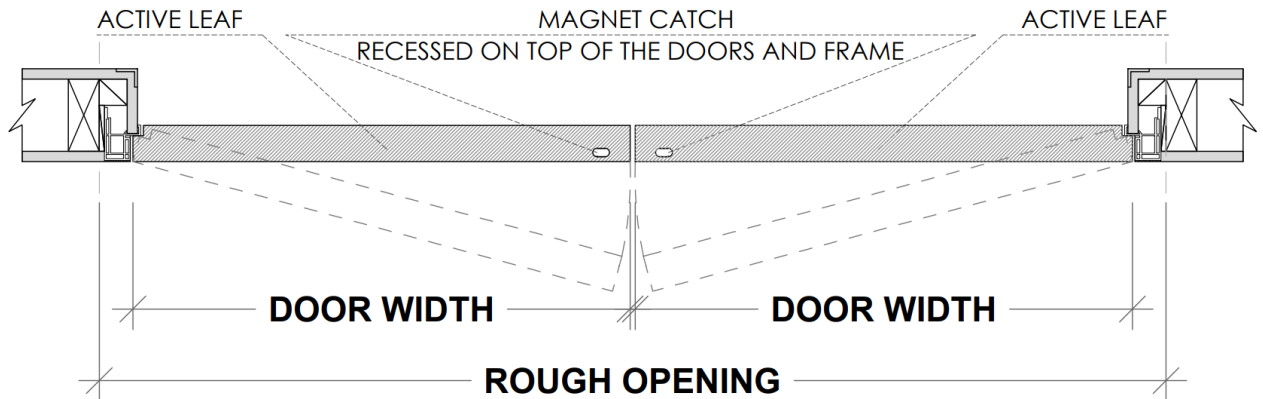

$$\text{ROUGH OPENING} = (\text{DOOR WIDTH} \times 2) + 3 \frac{1}{2}"$$


Active / Inactive Door with flush bolts

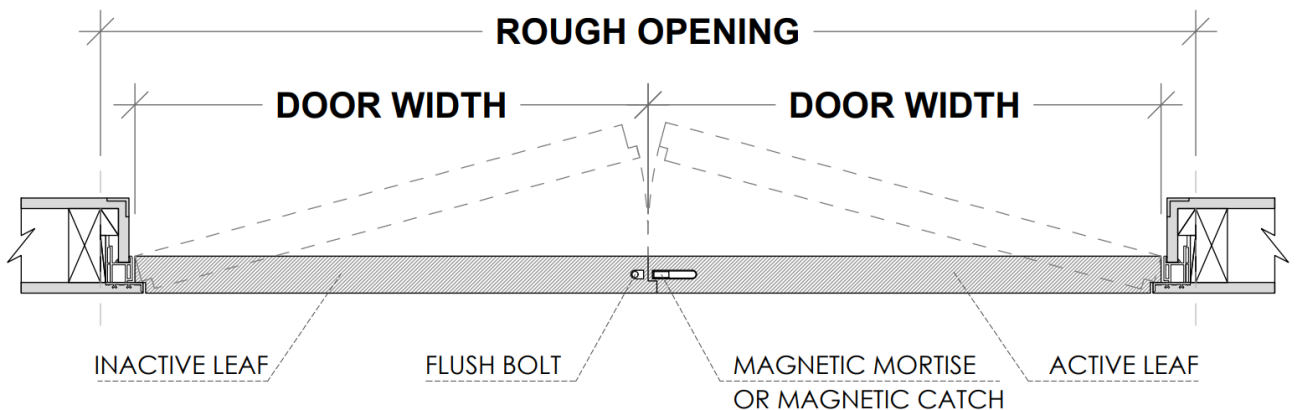

RHA (RIGHT HAND ACTIVE) SHOWN

$$\text{ROUGH OPENING} = (\text{DOOR WIDTH} \times 2) + 3 \frac{1}{2}"$$


Filo muro with Transom Application

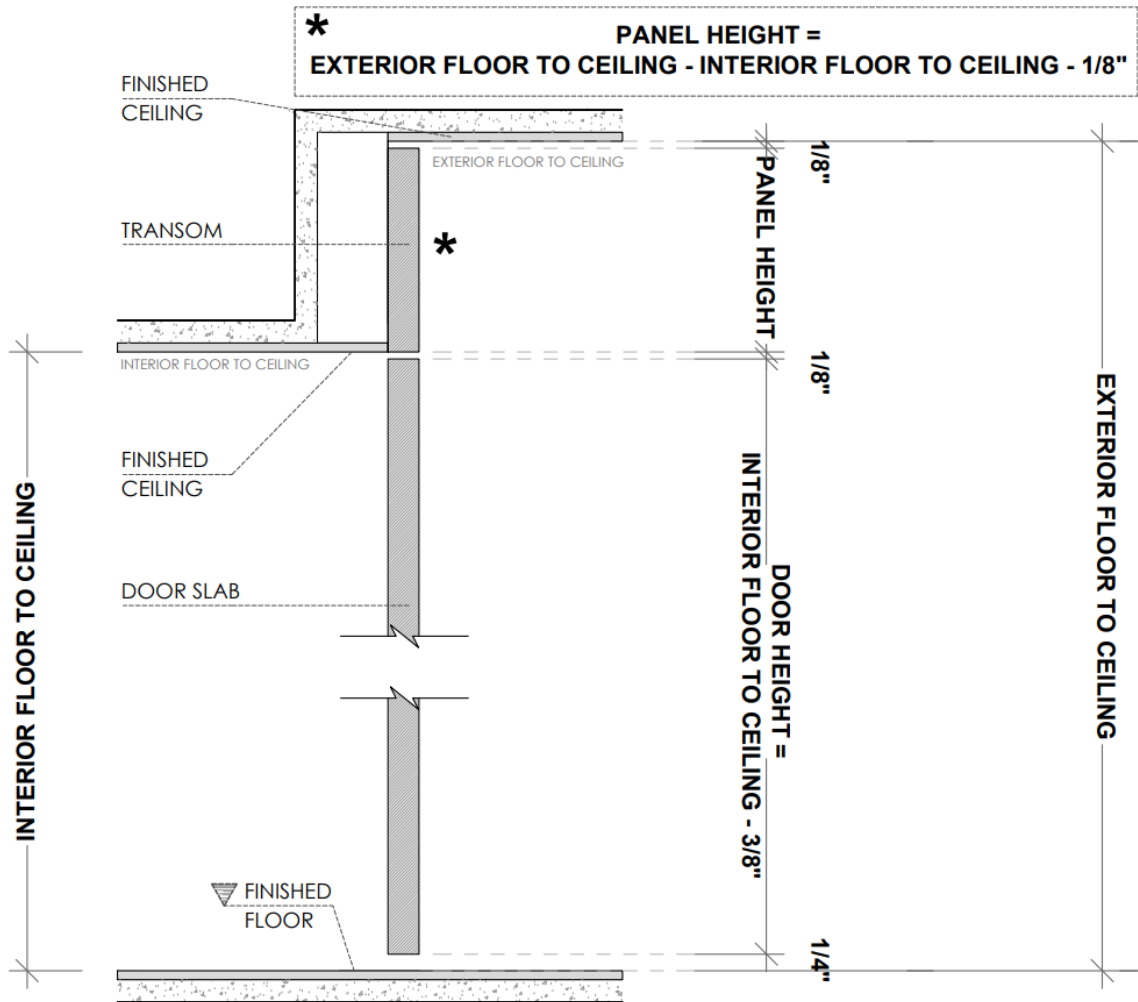


Hardware



Lock Types for Swing Doors

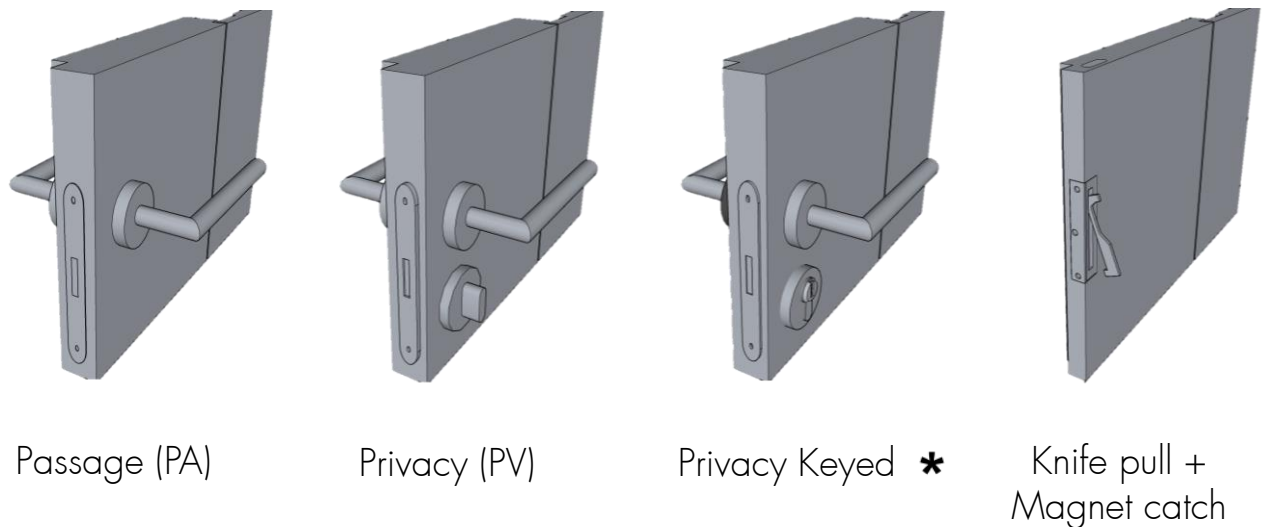

Bonaiti Magnetic Lock

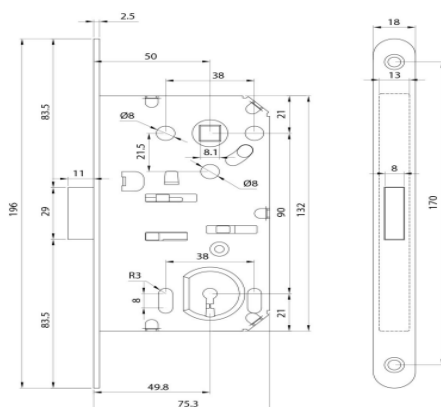

* Optional Upgrades

Filo muro/ frameless, flush to the wall

Installation Instructions

Doors and frames arrive mortised and cut to size.





Verify the level of the wall and rough openings

Identify the furthest point out of level of the wall. (This is where the door is installed).



Installing the aluminum frame


Place and screw wood shims leveling the aluminum frame inside 2'x4' rough, then remove frame stabilizers.

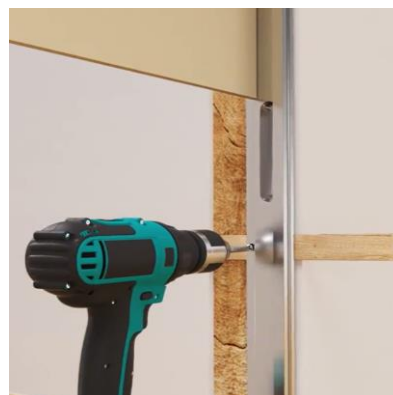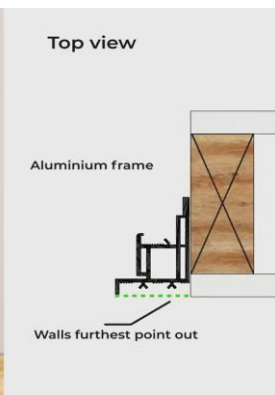

Filo muro/ frameless, flush to the wall


Hinge installation

Fit and screw hinges into the frame and door, then connect and screw hinges together while hanging door inside the aluminum frame. Use hinge adjustment screws to center door inside of the aluminum frame.

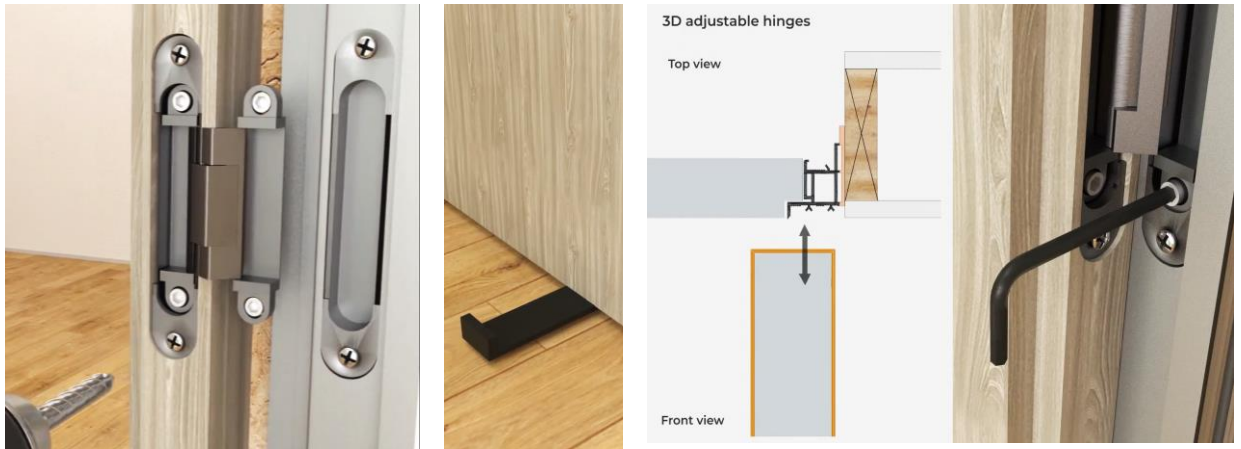

Handle installation

Screw handles into the mortised holes of the door and install rosettes. Proceed to cut the wood shims around the frame.

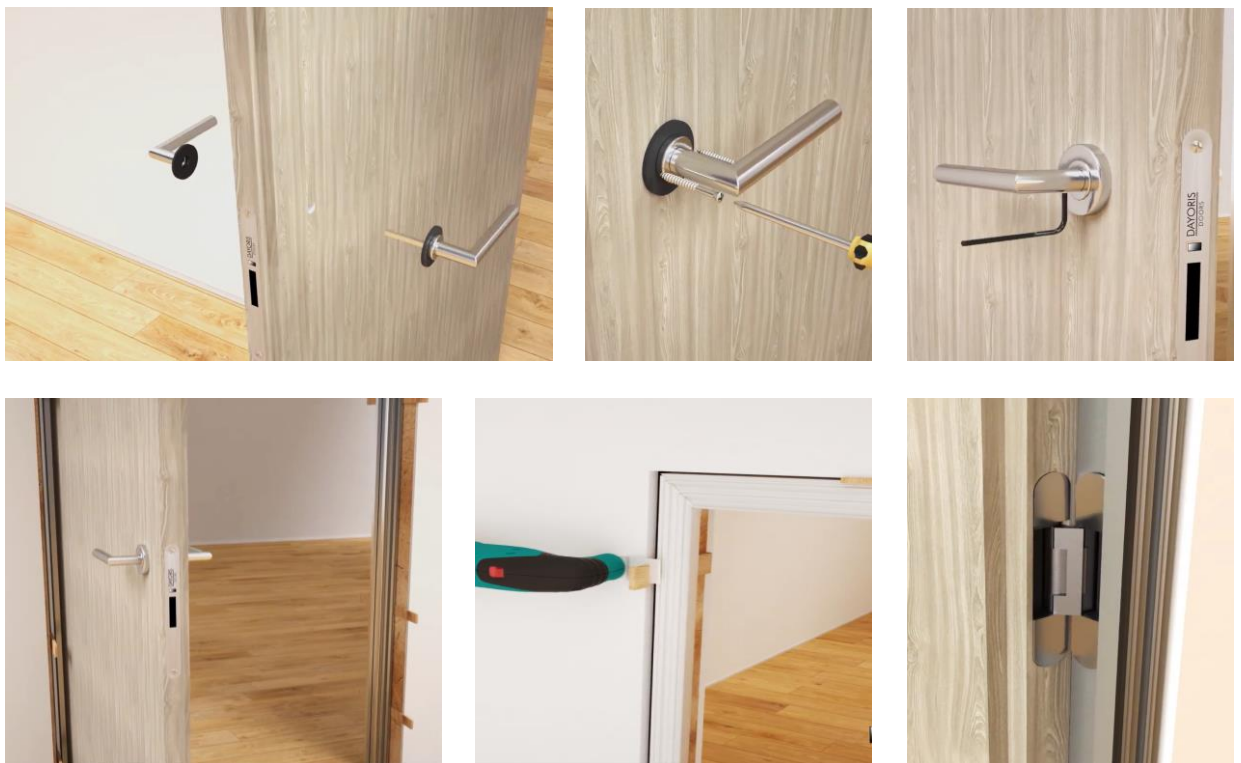

Filo muro/ frameless, flush to the wall


Finishing Technique

Flush to the wall

Front side: Use mesh tape to cover transition between 2'x4' and aluminum frame. Then apply plaster over mesh tape up to the 45° bevel in aluminum frame.



Rear side: Plaster application fits any wall thickness. Insert corner bead at transition point for a proper finish.

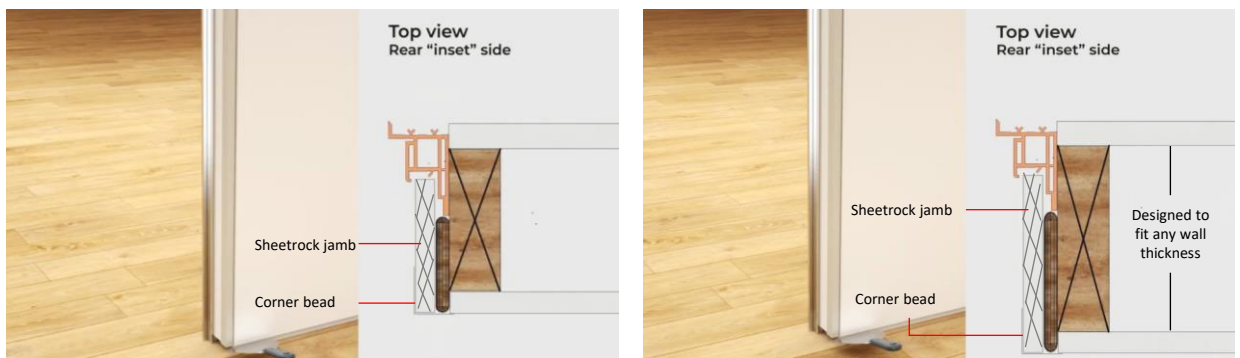

Tile or stone application: Plaster flush side as described above. Apply stone on jamb insert joining adjacent wall.

